

CAPPUCCI'

CAPPUCCI'

MANUALE DI ISTRUZIONI

INSTRUCTION MANUAL MANUAL DE INSTRUCCIONES
MANUEL D'INSTRUCTIONS BEDIENUNGSANLEITUNG

MANUAL DE INSTRUÇÕES



POLTI[®]

NATURAL HOME FEELING



CAVO ALIMENTAZIONE

POWER SUPPLY CABLE
CÂBLE D'ALIMENTATION
CABLE DE ALIMENTACIÓN
NETZKABEL
CABO ALIMENTAÇÃO




SCHIUMATORE

FROTHER
APPAREIL POUR FAIRE MOUSSER LE LAI
ESPUMADOR
MILCHSCHAUMBEREITER
ESPUMADOR



MISCELATORE

MIXER
MÉLANGEUR
MEZCLADOR
MISCHGERÄT
MISTURADOR

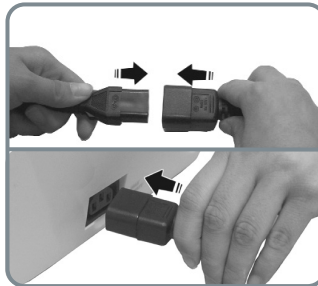

WELCOME TO THE WORLD OF POLTI

The new Polti cappuccino machine is ideal for everyone who wants to froth their milk and prepare a real cappuccino, just like you get at a café.



REGISTER YOUR PRODUCT

Visit our website www.polti.com or call our Customer Services department to register your product. You can benefit from a special welcome offer and keep up to date on all the latest Polti news, as well as buy accessories and consumables.

To register your product, in addition to your personal information, you must enter the serial number (SN) which you will find on the silver label, located on the box and underneath the appliance.

To save time and have your serial number to hand, write it in the space provided on the back cover of this manual.

SAFETY WARNINGS

IMPORTANT PRECAUTIONS FOR USE



WARNING! BEFORE USING THE APPLIANCE, CAREFULLY READ ALL THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, AND ON THE APPLIANCE ITSELF.

Polti S.p.A. declines all liability for any accident deriving from any improper use of this appliance.

Correct use of the product is only as detailed in this instruction manual.

Any use which does not comply with these instructions will invalidate the warranty.

SAFETY SYMBOLS:



WARNING: High temperature.
Risk of scalding!

If shown on the product, do not touch as parts may be very hot.

This appliance reaches very high temperatures. Incorrect use of the appliance can cause scalding.

- Never disassemble or carry out maintenance on the appliance apart from that indicated in this manual. In the event of a fault or malfunction, do not

try and repair the appliance yourself. In the event of a heavy knock, fall, damage or fall into water, the appliance may no longer be safe to use. Incorrect use or a lack of respect for the instructions herein may lead to serious accidents. Always contact Authorised Service Centres.

- To carry out any maintenance or cleaning requiring access to the boiler, ensure that the appliance is switched off at the power switch and disconnected from the mains for at least two hours.
- This appliance can be used by children over 8 years old, by people with reduced physical, sensory or mental abilities or by inexperienced persons only where they are instructed in advance on its safe use and only if informed of the dangers related to the product. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be done by children without the supervision of an adult. Keep the appliance and the power cable out of the reach of children under 8 years of age when the appliance is on or during the cooling phase.
- Keep all the parts of the packaging out of the reach of children; they are not toys. Keep the plastic bag out of the reach of children: danger of suffocation.

- This appliance is destined exclusively for indoor domestic use.

In order to reduce the risk of accidents, including: fires, electrocution, personal injury and scalding, both during use and during preparation, maintenance and storage, always take the fundamental precautions listed in this manual.

RISKS CONNECTED TO THE POWER SUPPLY - ELECTROCUTION

- The earthing system and highly sensitive residual-current circuit breaker, complete with magnetothermic cut-out for your domestic system, guarantee safe use of electrical appliances. Therefore, for your own safety, check that the electrical system to which the appliance is connected complies with current laws.
- Do not connect the appliance to the mains if the voltage does not correspond with that of the domestic electrical circuit in use.
- Do not overload the sockets with adaptors and/or transformers. Only connect the product to a single socket with current that is compatible with the supplied plug.
- Do not use electrical extension leads that are unsuitable for the power rating

or which are not compliant with law. They may overheat and possibly lead to short circuiting, fire, power outage or damage to the equipment. Only use extension leads which are certified, suitable for the power rating, supporting 16A or power above 2220W, and earthed.

- To remove the plug from the socket, do not pull the power cable, but hold the plug itself to avoid damage to the plug and the cable.
- Always unplug the appliance if it is not in use and before any preparation, maintenance or cleaning operation.
- The appliance must not be left unattended if plugged in to the mains.
- Always use the product with the cable completely unwound.
- Do not pull or jerk the cable or expose it to tensions (twisting, crushing or stretching). Keep the cable away from hot and/or sharp surfaces and elements. Avoid crushing the cables in doors and windows. Do not pull the cable tight around corners. Avoid treading on the cable. Do not pass over the cable with the appliance. Do not wind the power cable around the appliance, especially if the appliance is hot.
- Do not substitute the plug on the power cable.

- If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid all possible hazards. Do not use the product if the power cable is damaged.
- Do not touch or use the appliance barefoot and/or with wet body or feet.
- Do not use the appliance near containers full of water, e.g. sinks, baths and swimming pools.
- Do not immerse the appliance, including the power cable and plug, in water or other liquids.

RISKS DURING USE OF THE PRODUCT - INJURIES/SCALDING

- The product should not be used in areas where there is a danger of explosions or in the presence of toxic substances.
- Do not position the product near sources of heat such as fireplaces, stoves and ovens.
- During use, keep the product in a horizontal position on stable surfaces.
- Do not place the product and/or its components in the oven, on burners or on stoves to warm drinks or for any other reason.
- Do not place the product and/or its components in the dishwasher. For maintenance, refer to the chapter

“General Maintenance”.

- Wash the pot and accessories thoroughly to avoid contamination of surfaces that come into contact with the contents.
- Do not put your fingers in the pot when the appliance is operating and/or connected to the mains.
- Do not touch the pot with your hands when it is hot, use the special handle.
- The product prepares hot drinks. Take care when drinking to avoid burns.
- The pot must only be used with the supplied base.
- Never open the cover while the appliance is operating.
- The pot has a 100-250 ml capacity, indicated by the graduated scale on the side. Never exceed the maximum level (250 ml), or the milk will spill out.
- Never leave the appliance exposed to weathering.

CORRECT USE OF THE PRODUCT

This appliance is intended for home use for the preparation and/or mixing of hot or cold drinks, in accordance with the instructions provided in this manual.

Please read these instructions carefully and keep them. If this manual is lost, it can be consulted and/or downloaded online at www.polti.com.

Only usage as detailed in this instruction manual constitutes correct usage. Any other use may damage the appliance and invalidate the warranty.

INFORMATION FOR USERS

Pursuant to European Directive 2012/19/EU, regarding electric and electronic appliances, this appliance must not be disposed of with domestic waste, but sent to an official collection facility. This appliance complies with EU Directive 2011/65/EU

 



The crossed-out bin symbol on the appliance indicates that, at the end of its useful lifespan, the product must be disposed of separately from other waste. Therefore, at the end of its life, the user must handover the appliance to an appropriate collection centre for electric and electronic waste. Proper separate waste collection to facilitate the subsequent recycling, treatment and environmentally compatible disposal of the appliance helps to prevent negative effects on the environment and human health, and promotes recycling of the materials the product is made of. Unlawful disposal by the owner involves the application of the administrative sanctions envisaged by current legislation.

1. PREPARING FOR USE

1.1 Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.

1.2 Depending on the drink you wish to prepare, choose the most suitable accessory.

 2x	FROTHER - ideal for frothing milk, either hot or cold
	MIXER - ideal for mixing milk, either hot or cold

Two of the accessories are located under the base, while the third is inside the pot.

1.3 Attach the accessory selected to the pin located on the bottom of the pot, applying gentle pressure. To remove it, pull it up.

2. MIX AND FROTH

Ensure points 1.2 and 1.3 have been carried out.

2.1 The minimum amount of milk that can be used is 100 ml., while the maximum is 250 ml. (the 1st and last markings on the graduated scale seen on the pot).




WARNING: Never exceed the maximum level, or the milk will spill out.

2.2 Close the lid and place the pot on the base.

2.3 Connect the auxiliary plug to the power supply cable and then plug it into an appropriate power socket.

If you have a Polti coffee machine with an auxiliary plug, it is possible to directly connect the Cappucci using the cable. In this case, the coffee machine needs to be connected to the mains and turned on.

2.4 Select the function key based on the type of drink you want to prepare.

	mix and froth cold
	mix, froth and heat at medium temperature
	mix, froth and heat at high temperature

The button selected will light up to indicate that the appliance is working.

When preparing beverages at medium or high temperatures, the process will automatically stop after about 90 - 240 seconds. When preparing cold milk, it is necessary to manually stop the process by pressing the selected button a second time, or by removing the pot.

WARNING: Wait until the base has cooled before repeating the process (about 5 min.). This allows the heating system to work at an appropriate temperature.

3. HEAT-UP

Proceed as indicated in Chapter 2, without using the accessories.

4. PREPARE HOT CHOCOLATE

Proceed as indicated in Chapter 2, using the mixer accessory and powdered chocolate.

WARNING: always pour the powdered chocolate after having poured in the milk. Otherwise the mixer accessory might not work properly.

5. GENERAL MAINTENANCE

Before attempting any maintenance operation, make sure to always disconnect the appliance from the mains.

Always make sure that the appliance is cooled before beginning any type of maintenance.

Do not use acids or solvents to clean the base. Use only a damp cloth, taking care that any excess water does not touch the electrical parts of the appliance.

Never use metal or abrasive objects or aggressive or abrasive detergents.

Wash the pot by hand and dry it with a soft cloth.

Wash the accessories with water and detergent.

Never wash any part in a dishwasher.

6. TROUBLESHOOTING - TIPS

PROBLEM	CAUSE	SOLUTION
The indicator light on the “high-temperature” key flashes	malfunction in the heating system	contact an assistance centre
The milk does not froth	Wrong accessory Frother accessory is attached wrong There is less than 100 ml. of milk in the pot	Attach the correct accessory Attach the accessory properly Increase the amount of milk until it reaches at least the minimum mark
The appliance does not work and one of the function buttons does not light up	The appliance has not been activated The electrical socket is defective The pot is not completely on the base	Activate the appliance by pressing one of the function buttons Try with a different electrical socket Place the pot completely on the base

WARRANTY

This appliance is for domestic use only and is guaranteed for two years from the date of purchase against any defects present at the time the goods are handed over; the date of purchase must be proven via a proof of purchase document valid for tax purposes and issued by the seller.

For repairs, the appliance must be accompanied by proof of purchase.

This warranty does not affect the consumer rights deriving from European Directive 99/44/EC as regards some aspects of sale and warranty of consumer goods, rights which the consumer should uphold with respect to the seller.

This warranty is valid in the countries which adhere to European Directive 99/44/EC. For other countries, local regulations on warranties apply.

WHAT THE WARRANTY COVERS

During the warranty, Polti guarantees free repair of a product with a manufacturing or factory defect and, therefore, the client is not liable to pay for any work or materials.

In case of irreparable defects, Polti may replace the product free of charge.

To avail of the warranty, the customer should visit one of the Polti Authorised Service Centres with proof of purchase from the seller valid for tax purposes and bearing the date of purchase of the product. Without proof of purchase and the relative date of purchase, the work will be charged for. Store the proof of purchase document safely for the whole duration of the warranty.

WHAT THE WARRANTY DOES NOT COVER

- Any fault or damage not deriving from a manufacturing defect.
- Any fault due to improper use or use other than that indicated in the instruction booklet, an integral part of the product sales contract.
- Any defect resulting from *force majeure* (fires, short circuits) or caused by third parties (tampering).
- Damage caused by the use of non-original Polti parts, and repairs or modifications performed by staff or service centres not authorised by Polti.
- Damage caused by the customer.
- Parts (filter, brush, hose, etc.) damaged by use (consumable goods) or normal wear and tear.
- Any damage caused by limescale.
- Defects resulting from lack of maintenance/cleaning according to the manufacturer's instructions.
- Assembly of non-original Polti accessories or those that have been modified or which are not suitable for the appliance.

Inappropriate use and/or use not compliant with the instructions for use and any other warnings or indications contained in this manual invalidates the warranty.

Polti takes no responsibility for any direct or indirect damage to people, objects or animals caused by non-compliance with the instructions indicated in this instruction booklet, regarding warnings for use and product maintenance.

To see the up-to-date list of the Polti Authorised Service Centres, visit the website www.polti.com.

CAPPUCCI





REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO

SN:



CALL CENTER

ITALIA SERVIZIO CLIENTI	848 800 806
FRANCE SERVICE CLIENTS	04 786 642 10
ESPAÑA SERVICIO AL CLIENTE	02 351 227
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0845 177 6584
DEUTSCHLAND KUNDENDIENST	03222 109 069 6

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM



POLTI®

NATURAL HOME FEELING

POLTI S.p.A, - Via Ferloni, 83
22070 Bulgarograsso (CO) - Italy
www.polti.com